



STARTING AND IGNITION (FOR 2JZ-GTE)

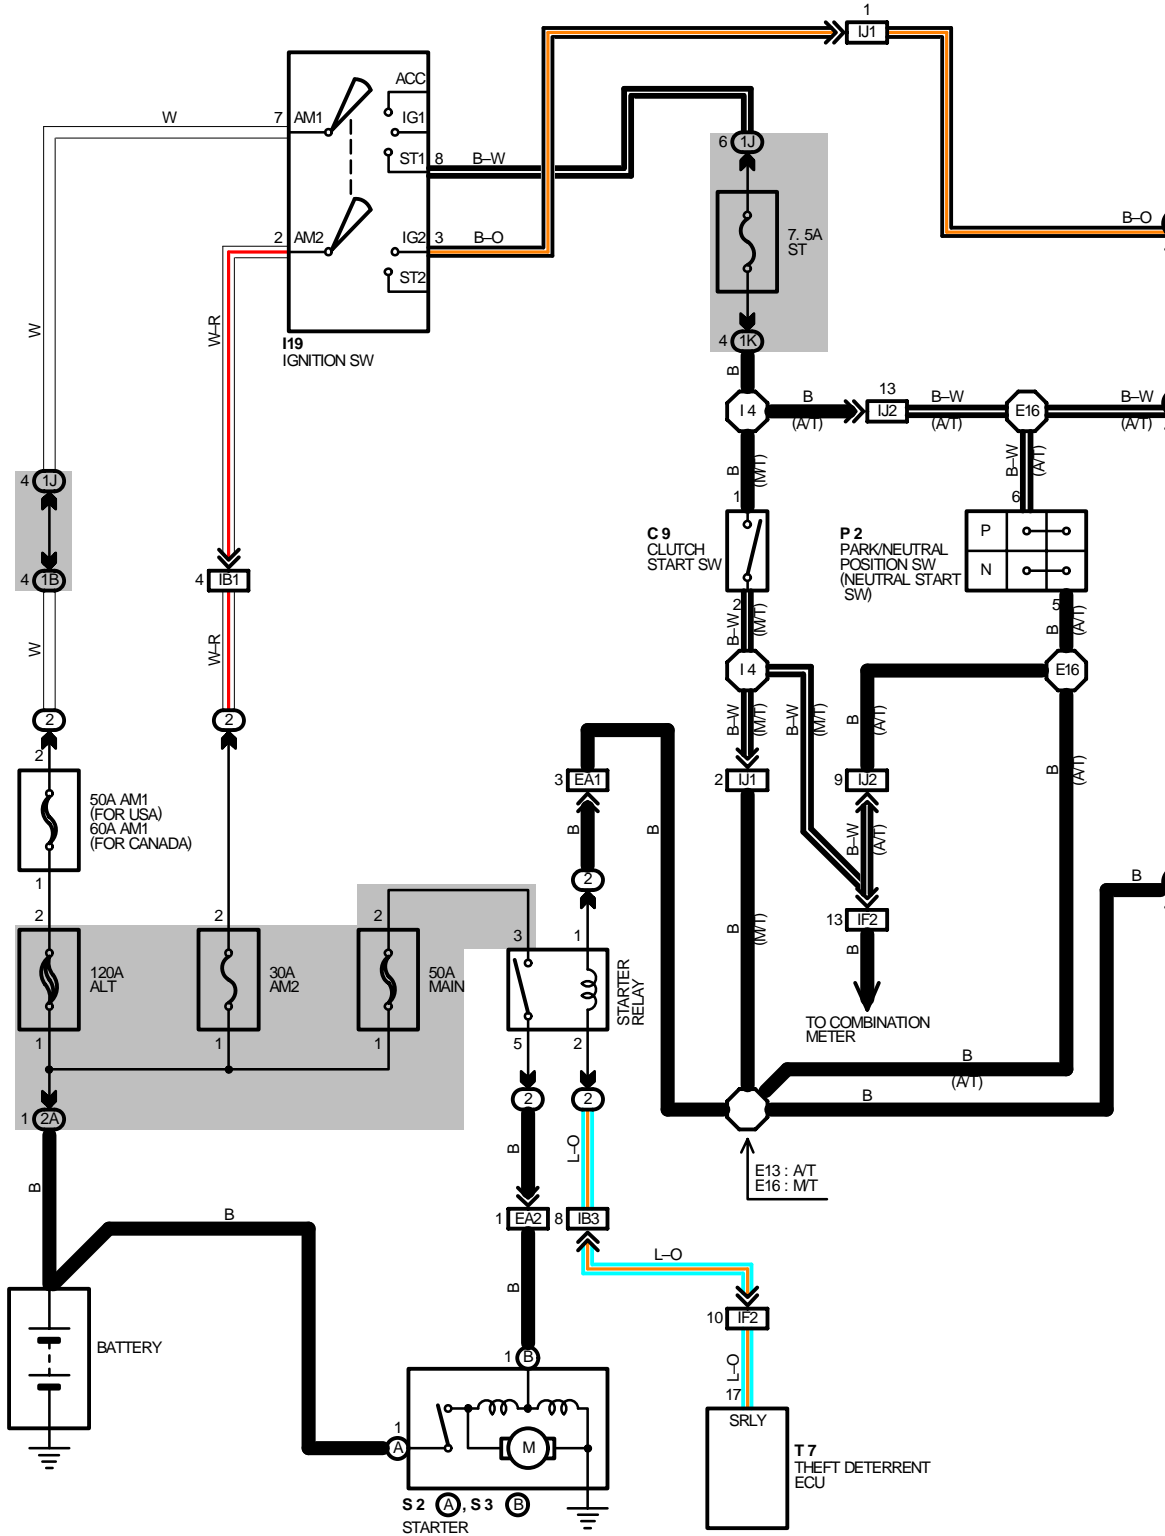

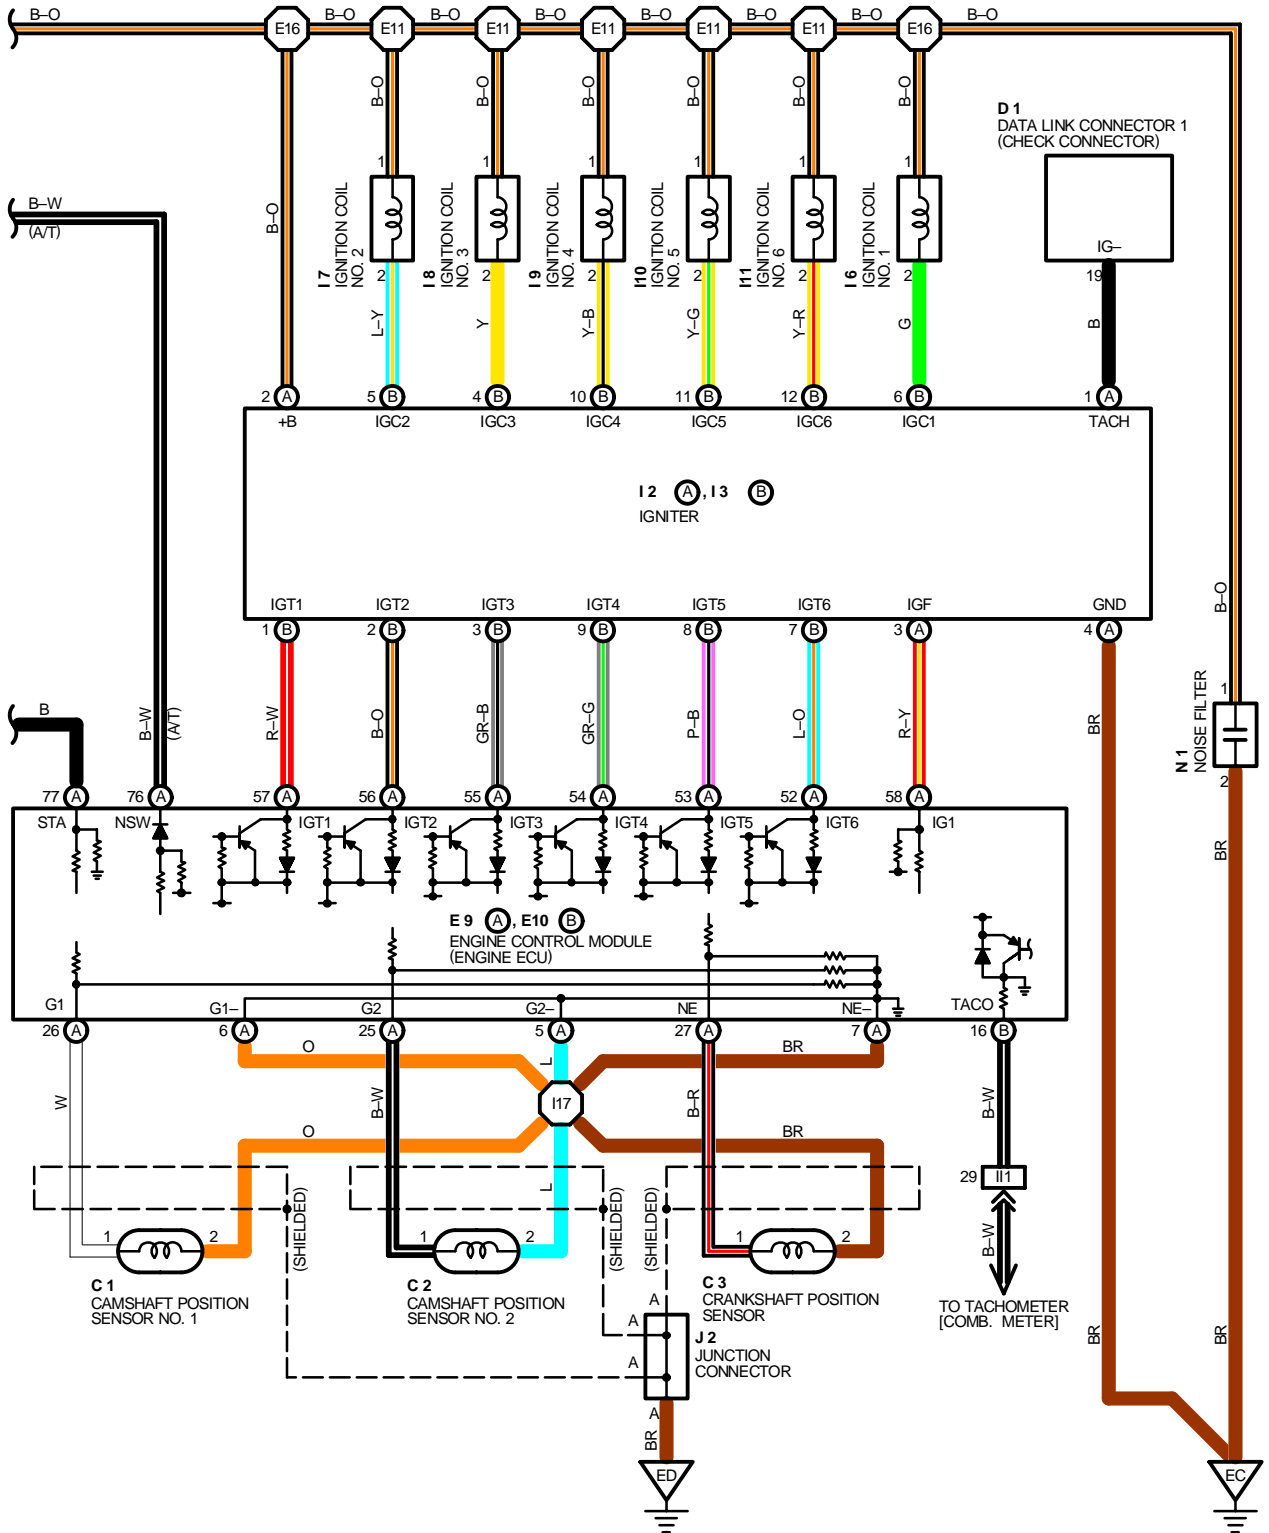

STARTING AND IGNITION (FOR 2JZ-GTE)

SERVICE HINTS

I19 IGNITION SW

7-8 : CLOSED WITH IGNITION SW AT **ST** POSITION
 2-3 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

P 2 PARK/NEUTRAL POSITION SW (NEUTRAL START SW) (A/T)

6-5 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

C 9 CLUTCH START SW (M/T)

1-2 : CLOSED WITH CLUTCH PEDAL FULLY DEPRESSED

S 2(A), S 3(B) STARTER

POINTS CLOSED WITH PARK/NEUTRAL POSITION SW (NEUTRAL START SW) ON AND IGNITION SW AT **ST** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 1	24	I 3	B 25	J 2	29
C 2	24	I 6	25	N 1	25 (2JZ-GTE)
C 3	24	I 7	25	P 2	25 (2JZ-GTE)
C 9	28	I 8	25	S 2	A 25 (2JZ-GTE)
D 1	24 (2JZ-GTE)	I 9	25	S 3	B 25 (2JZ-GTE)
E 9	A 29	I10	25	T 7	29
E10	B 29	I11	25		
I 2	A 25	I19	29		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1J	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1K		
2A	22	BATTERY AND J/B NO. 2 (ENGINE COMPARTMENT LEFT)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	32 (2JZ-GTE)	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE R/B NO. 2)
EA2	32	
IB1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IB3		
IF2	36	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL REINFORCEMENT LH)
II1	38	ENGINE WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IJ1	38	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IJ2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	32 (2JZ-GTE)	FRONT SIDE OF INTAKE MANIFOLD
ED	32 (2JZ-GTE)	REAR SIDE OF INTAKE MANIFOLD

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E10	32	ENGINE WIRE	E16	38	ENGINE WIRE
E11			I 4	38	COWL WIRE
E13			I17	38	ENGINE WIRE

C 1 BLACK



C 2 BLACK




C 3 DARK GRAY




C 9




D 1 BLACK

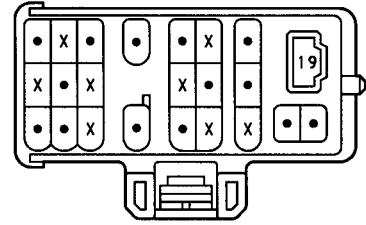

E 9 (A) DARK GRAY

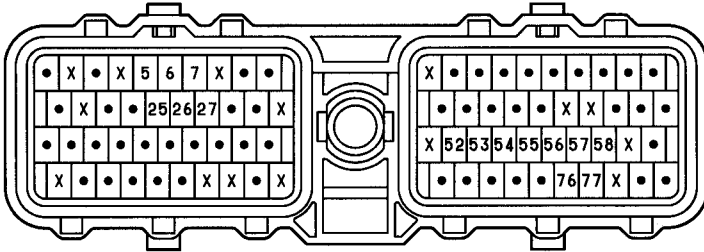


E10 (B) DARK GRAY

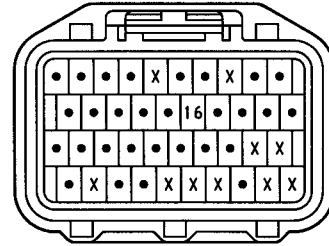


I 2 (A) BLACK




I 3 (B) BLACK

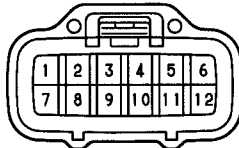


I 6, I 7, I 8
I 9, I 10, I 11 BLACK

 

I 19

 

J 2

 


(HINT:SEE PAGE 7)

N 1 GRAY



P 2 GRAY

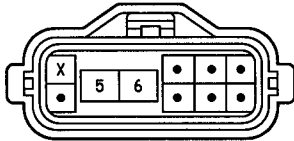

S 2 (A)



S 3 (B) BLACK



T 7 ORANGE

